


INSTALLATION INSTRUCTIONS


Mechanical PARTS LIST:

Qty	Item Description	Qty	Item Description
2	Running Boards	2	8-1.25 x 30mm Large Bolt Plates (for front bracket)
1	Driver/Left Front Bracket Assembly	4	8mm Hex Nuts
1	Passenger/Right Front Bracket Assembly	2	8-1.25 x 25mm Small Bolt Plates (for rear bracket)
1	Driver/Left Rear Bracket Assembly	2	8mm x 16mm x 1.6mm Flat Washers
1	Passenger/Right Rear Bracket Assembly	8	6-1.0mm x 20mm Carriage Bolts
1	Electronic Materials Package	8	6mm Flange Nuts
8	8-1.25mm x 30mm Hex Bolts	4	Plastic Insulators
12	8mm Lock Washers	2	Adhesive Foam
12	8mm x 24mm x 2mm Flat Washers	15	Zip ties




Electronic Materials Package PARTS LIST:

Qty	Item Description	Qty	Item Description
1	Main Harness	1	ECU
2	Wire Taps	4	LED lights
1	LED Y-Harness (280mm)	1	LED Y-Harness (1200mm)

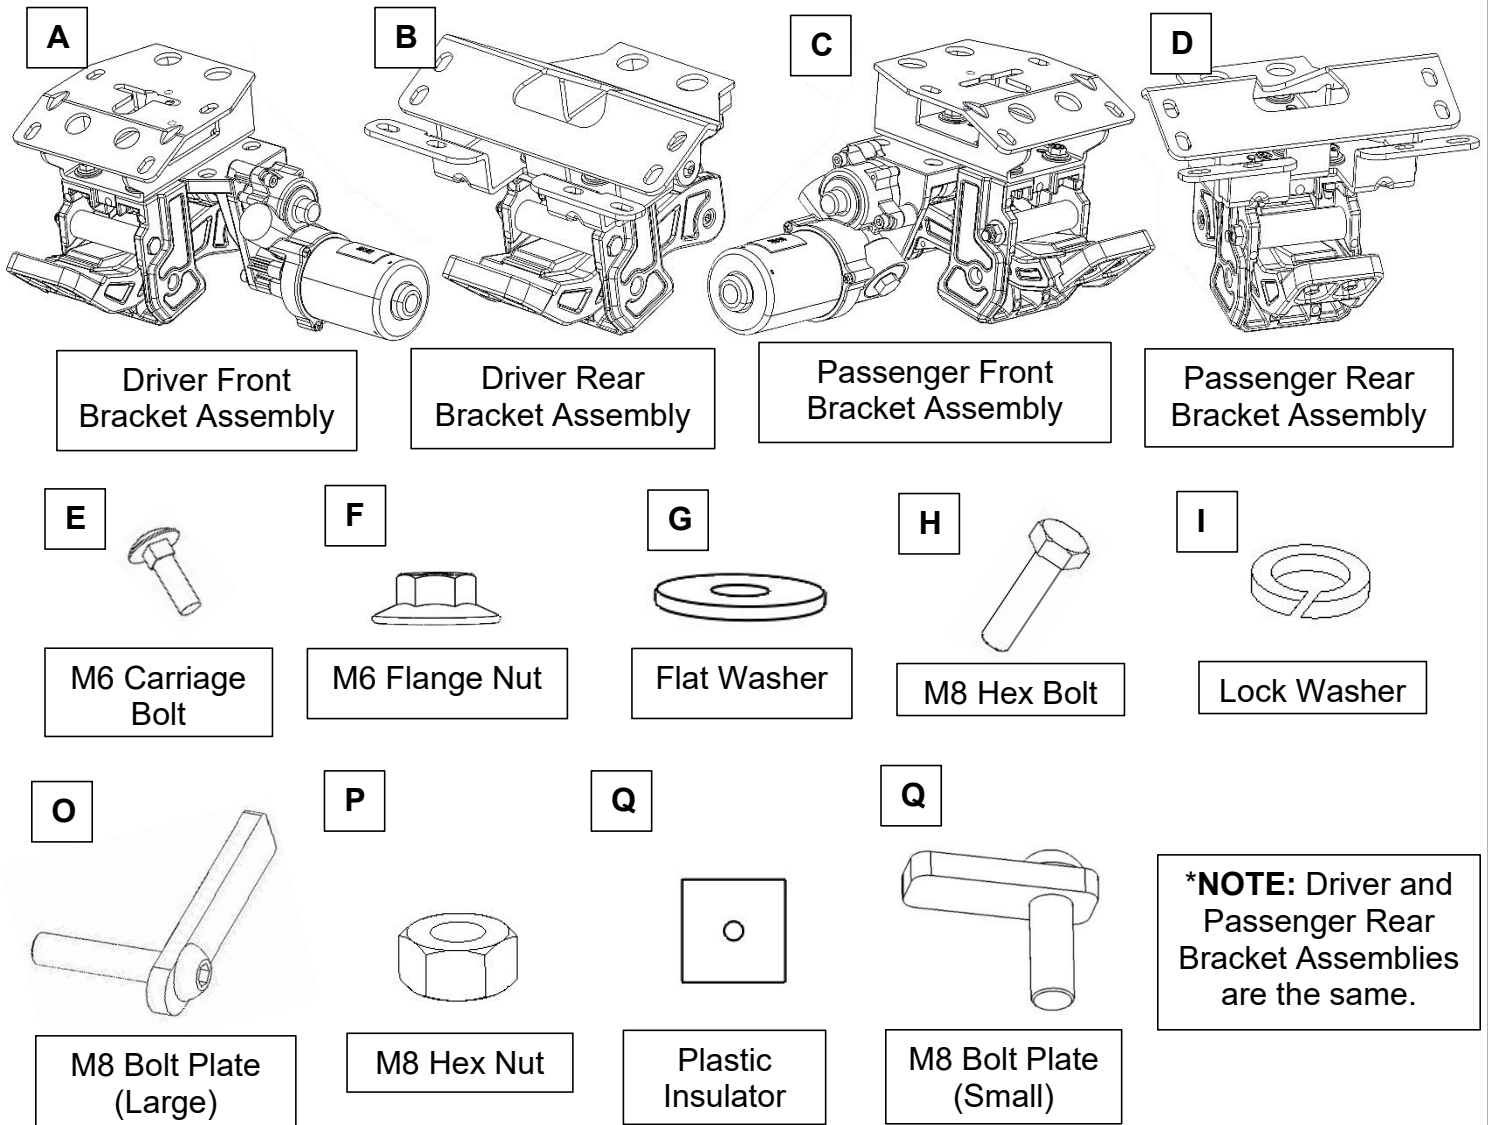


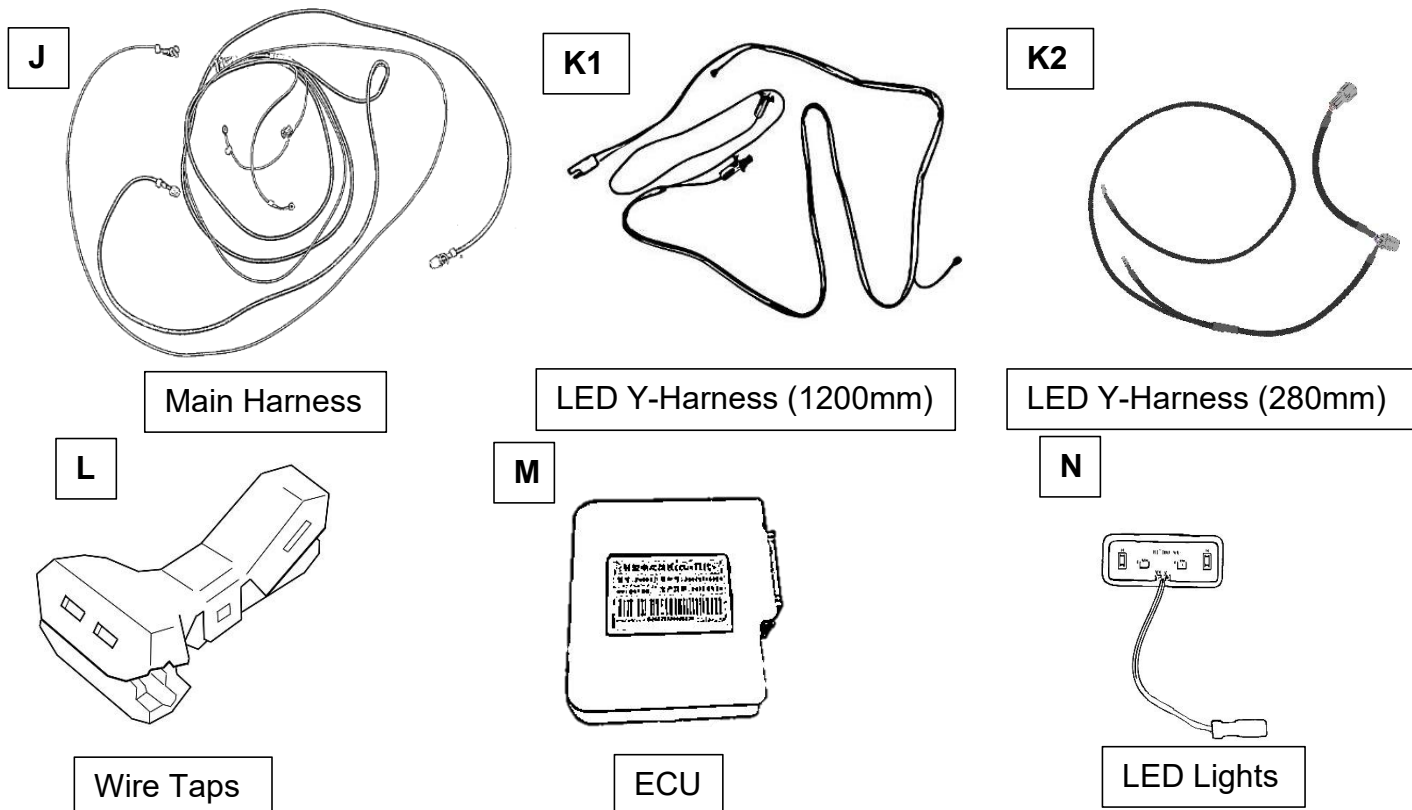


TOOLS REQUIRED

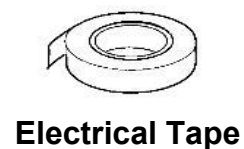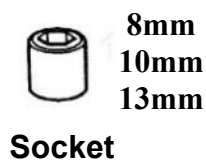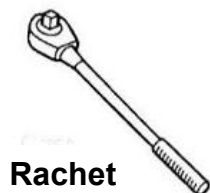

- 1 Start from the engine compartment by opening the front hood of the vehicle. Locate the Battery and its terminals (positive/negative). Remove the 25A fuse from the fuse box that comes with the main harness (J).

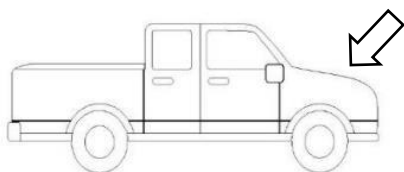

***WARNING:** Keeping the fuse connected to the fuse box may result in electrical sparks and risk of shorting when working with the battery.

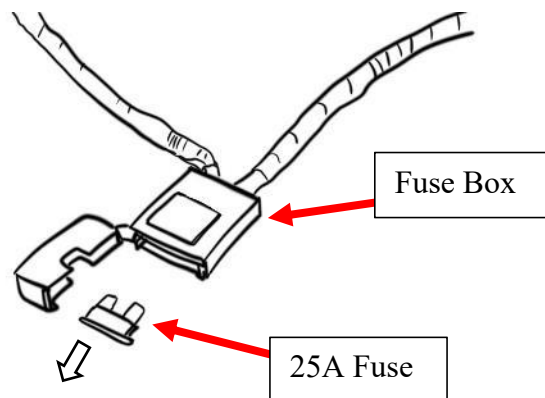


Connect the positive power lead on the main harness (J) to the positive battery terminal. Connect the negative lead to the negative battery terminal. Make sure both power leads are fully secured.

Connect the ECU (M) to the main harness.


Connect the Short LED Y-Harness (K2) to the Driver-side branch of the main harness.

Connect the Long LED Y-Harness (K1) to the Passenger-side branch of the main harness.

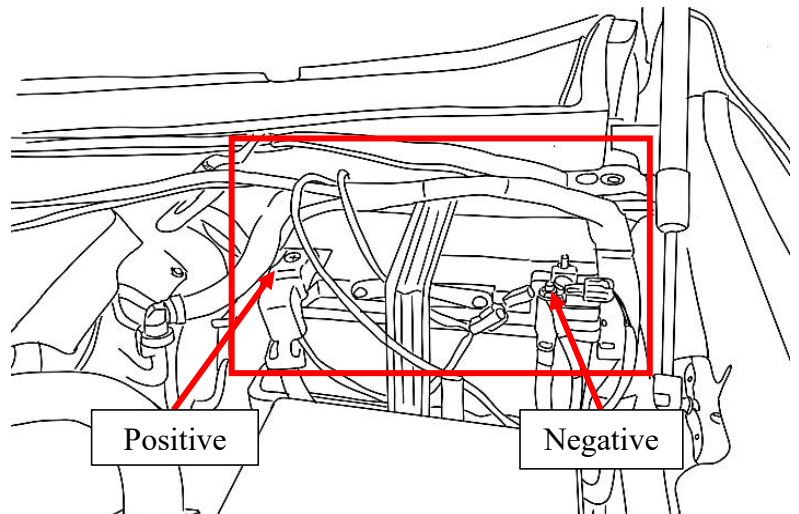

*NOTE: Battery is on Driver Side of engine compartment.

Route the main harness (J) around the battery, up along the rear of the engine compartment. The longer Driver-side branch of the main harness must route down the backside, against the fire wall, and down past the steering column towards the vehicle frame. **Be sure to avoid contact with the steering column.**

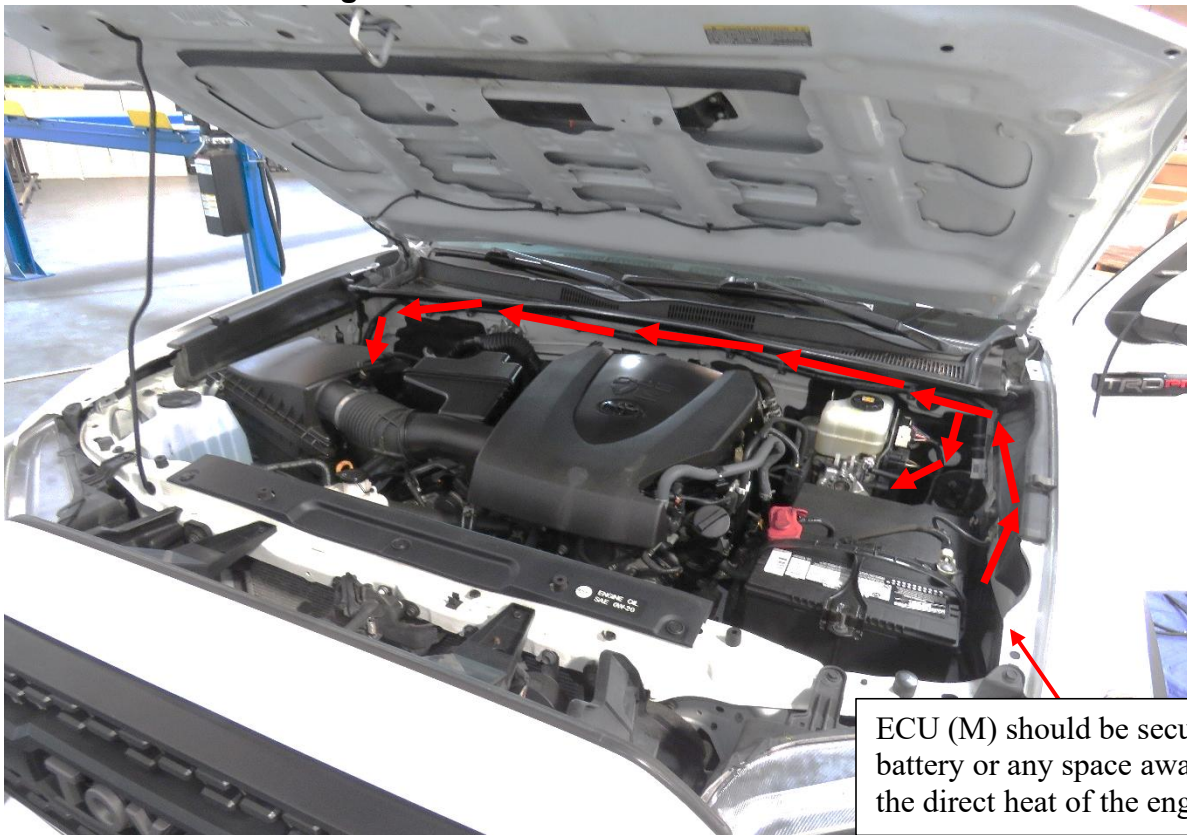


ECU (M) should be secured near battery or any space away from the direct heat of the engine.


Route the shorter (marked "Passenger-side") leg of the harness down the Passenger-side wheel well. **Be sure to avoid contact with any moving or hot engine components.** Attach and secure the main harness (J) with supplied cable ties.

Be sure the harness avoids contact with the suspension and steering column.

Inside the vehicle cabin, remove the driver-side front kick panel and bottom door sill panel. Peel back the carpet to access the hole with a removeable grommet. This is the hole where the signal wires from the Main Harness (J) will need to feed through.

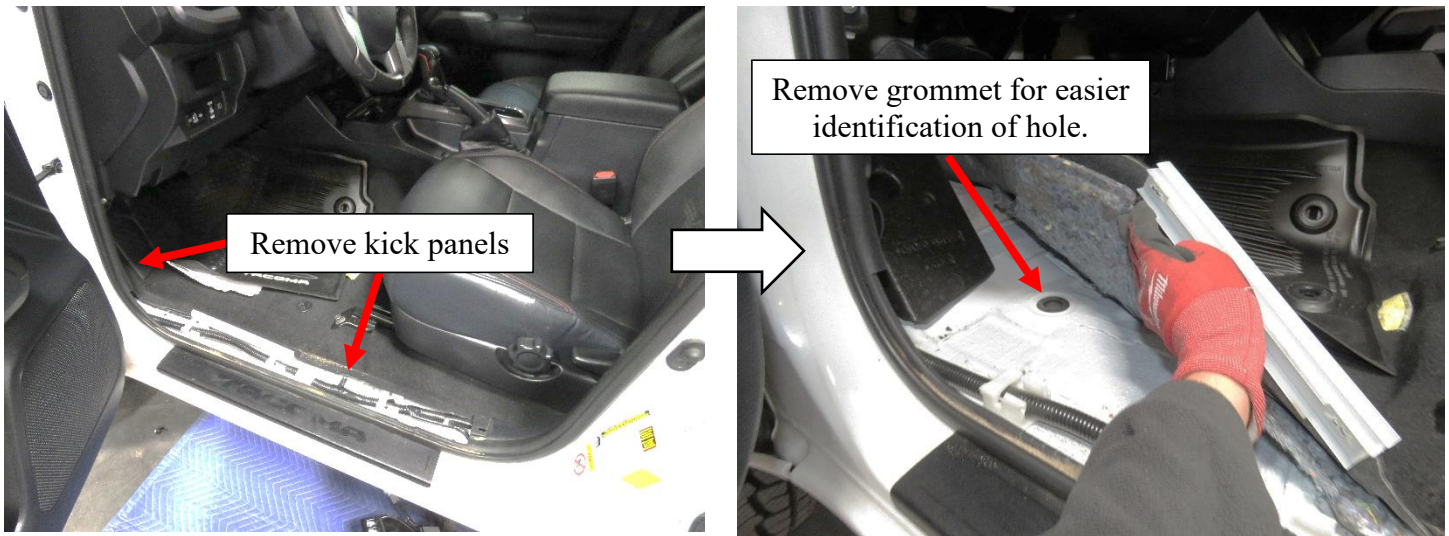


On the underside of the driver side, locate and remove the floor grommet in the floor panel above the frame. The grommet will be in a tight space above the frame and OE conduit. Poke a hole through the grommet and thread the two signal wires through and up into the vehicle cabin.

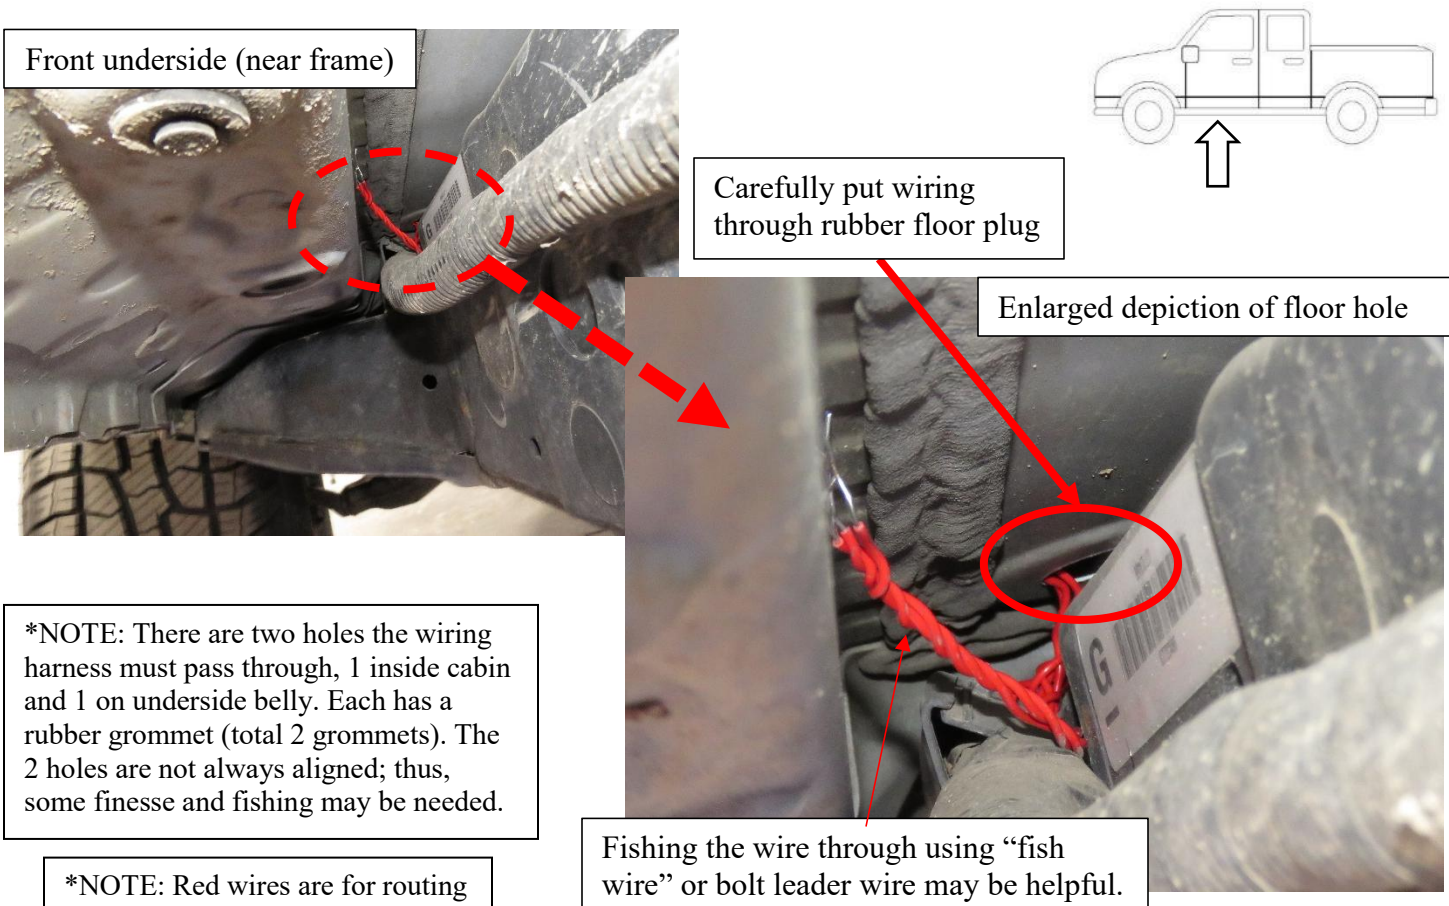

Locate the white OEM CAN Junction connector under the steering wheel, behind the kick panel. Be sure vehicle is not powered on. Locate the large bundled harness of wires on the backside of the junction (top of the stack of connectors). There should be several pairs of twisted colored wires in the wire harness bundle.



On the white connector, identify the Teal and White wires. Connect the High and Low wires from the main harness (J) using the supplied wire taps (L). After successfully connecting the wires, return the connector back into its place and check that it is secure.

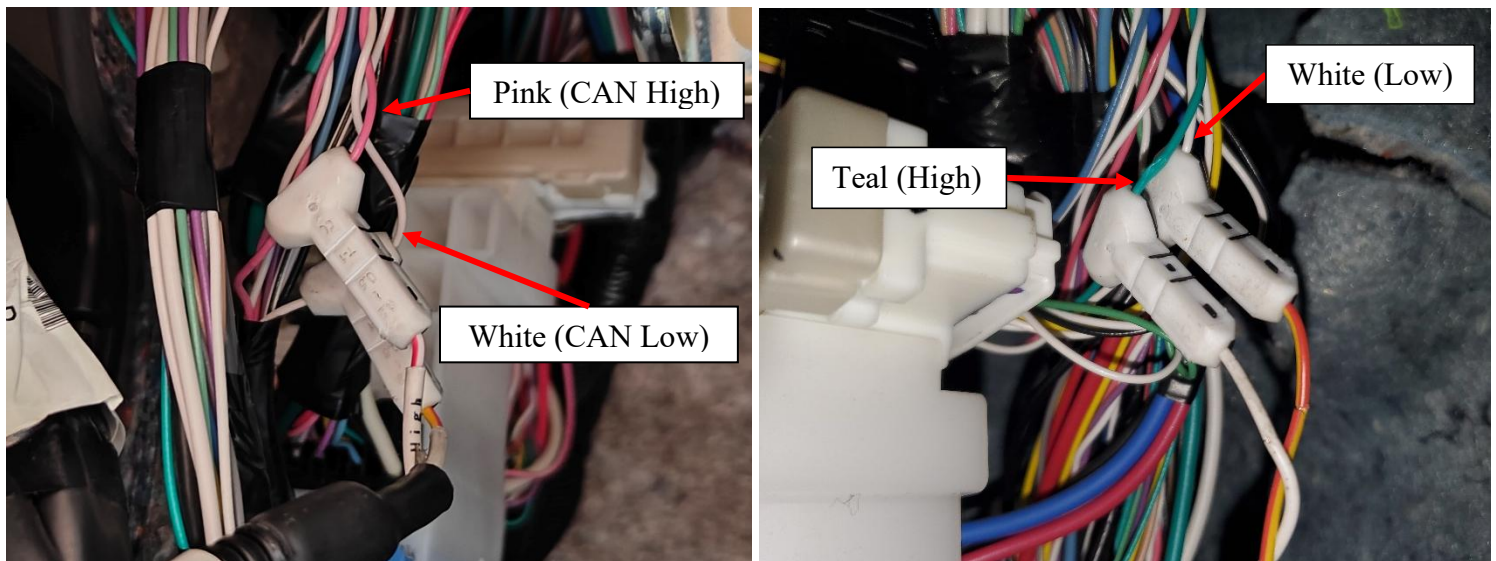


Factory CAN Wire/ Data Line	Power Step Main Harness Wire Color
Teal/ Pink (High)	White (CAN-H)
White (Low)	Yellow (CAN-L)


*NOTE: On some vehicle trims, the colors of the wires may be different. In these cases, the white wire of the twisted pair is always "CAN Low". The colored wire is "CAN High".

Wire taps supplied with kit.
Please see next page for guide.

The kit comes supplied with wire taps called “shark taps”. Follow the guide below to tap the wire using the “shark tap”:


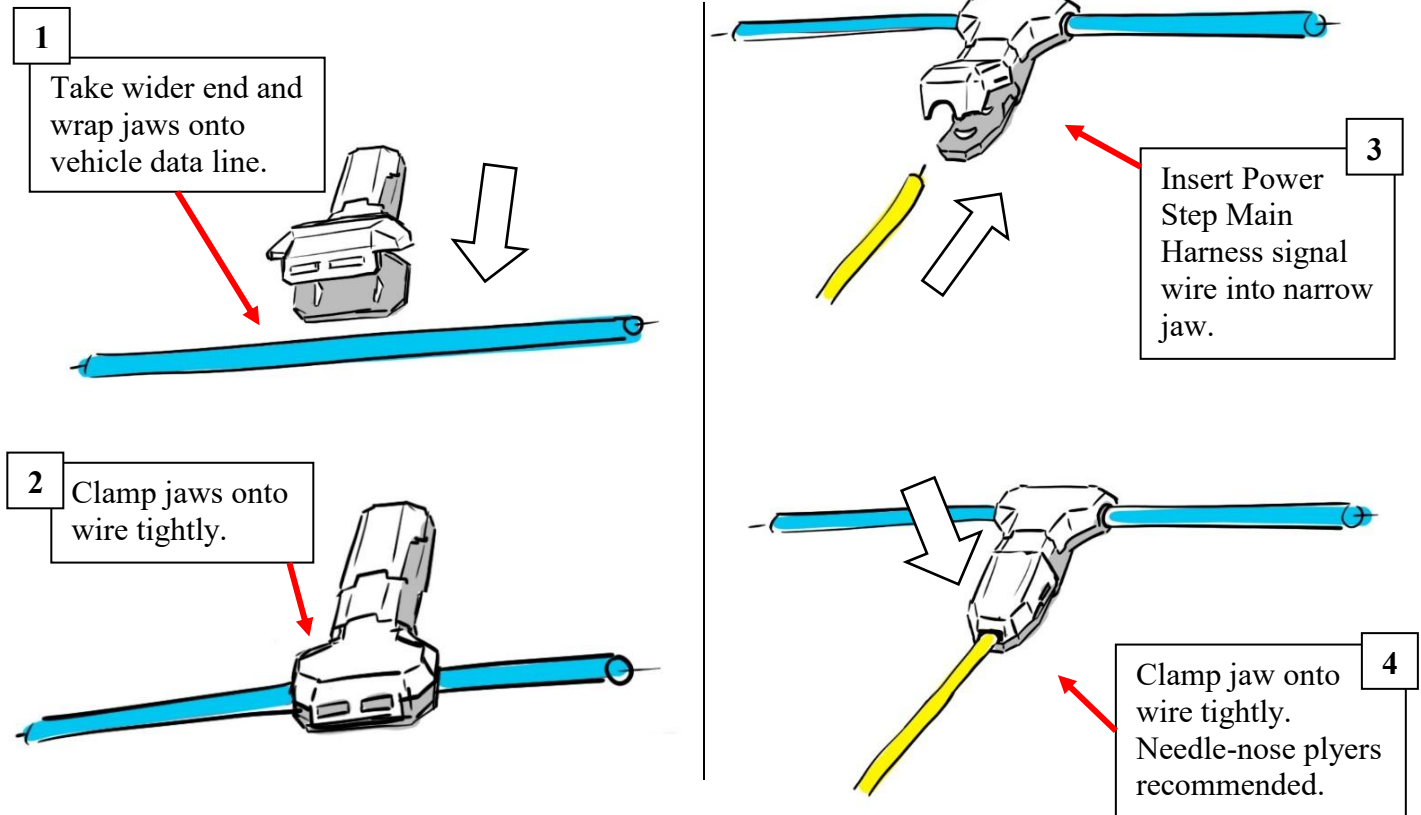


NOTE: Make sure wire is seated properly in the jaws before clamping. The wire being tapped must be centered on the “teeth” to make a proper tap.

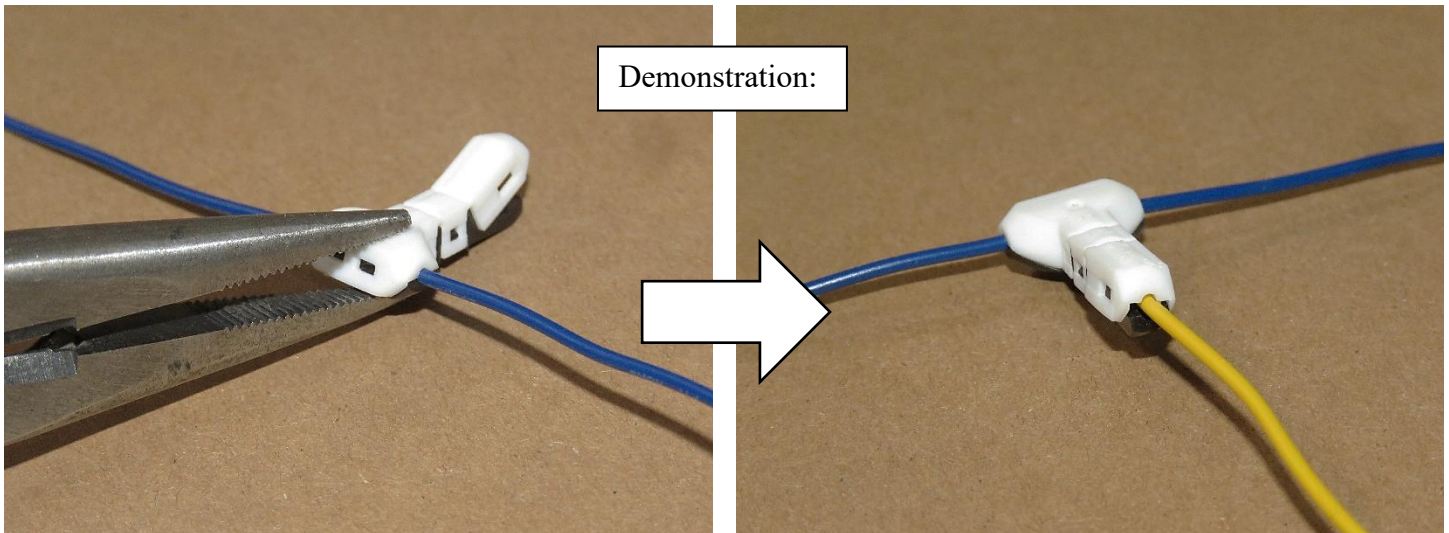



7

Locate Driver Side front mounting points on the rocker panel under the front door. Remove the OE bolts and appropriate rubber plugs before mounting the front bracket.

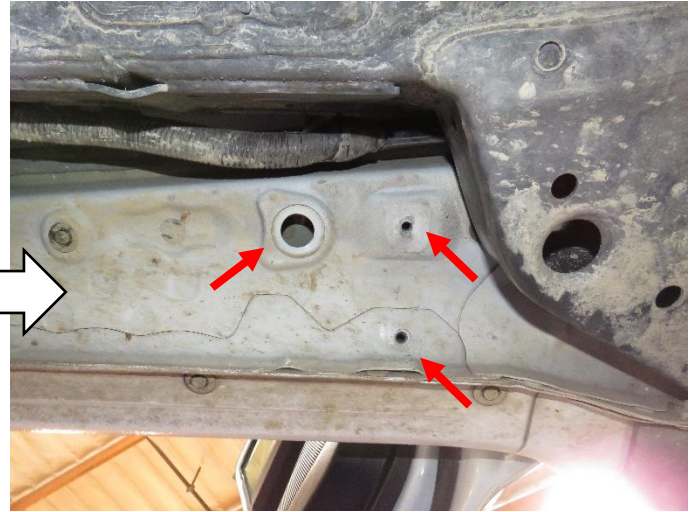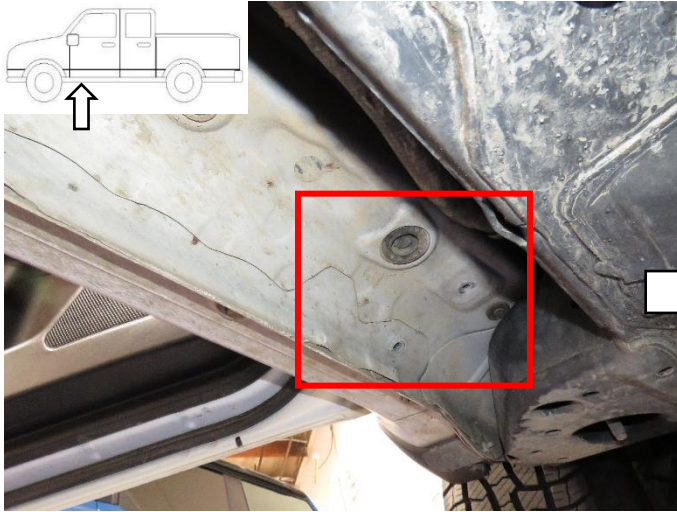


8

Next, take a Large Bolt Plate (O) and insert it into the large hole where the rubber plug was. Once the bolt plate sits in the hole with the threaded end stick out, use a Plastic Insulator to help the Large Bolt Plate stay in place.

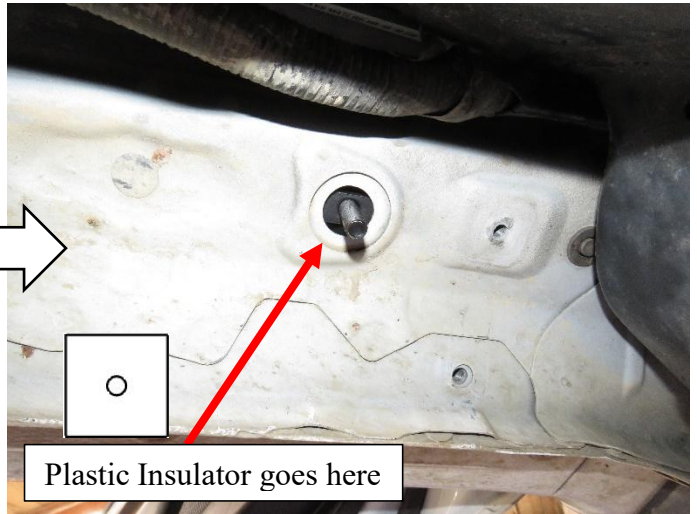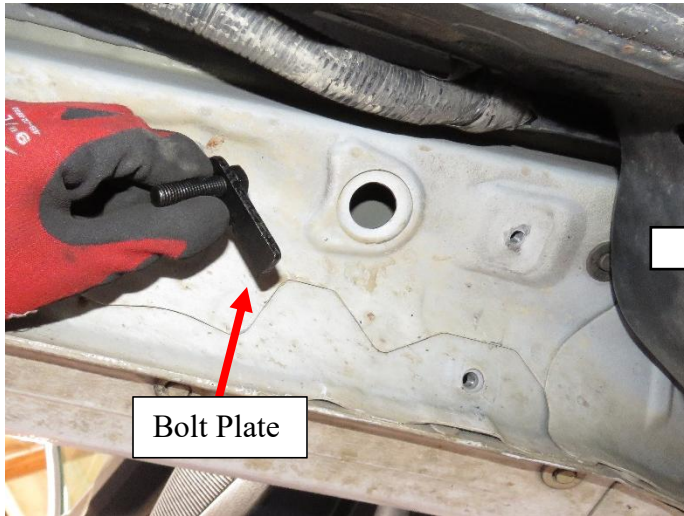

9


Locate Driver Side rear mounting points on the rocker panel. Remove the OE bolts before mounting the rear bracket.

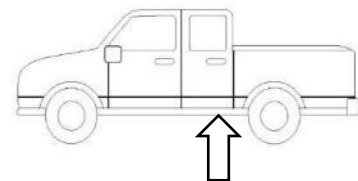

Next, line up front bracket slots to the threaded inserts and place Driver Side/Left Front Bracket Assembly (A) onto the vehicle. Then fasten Hex Bolts (H), Lock Washers (I), and Flat washers (G). Use a Hex Nut and Lock Washer for the bolt plate. Do not tighten all the way yet.






On some vehicles, may need to use additional flat washer to shim bracket at this lower insert.

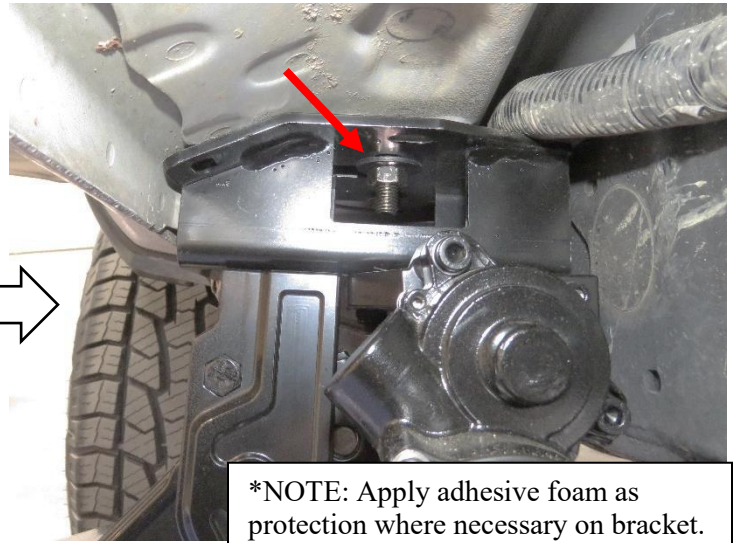


*NOTE: Apply adhesive foam as protection where necessary on bracket.

Locate rear mounting points. Next, line up rear mounting bracket slots to the threaded inserts and place Driver Side/Left Rear Bracket Assembly (B) onto rocker panel. Then fasten Hex Bolts (H), Lock Washers (I), and Flat washers (G). Do not tighten all the way yet.

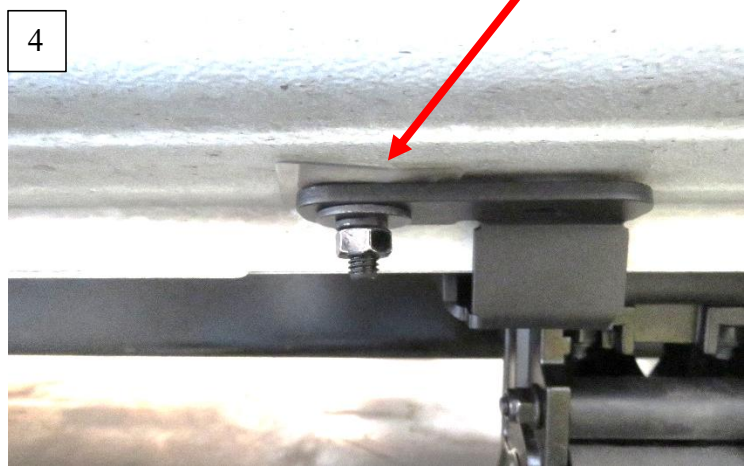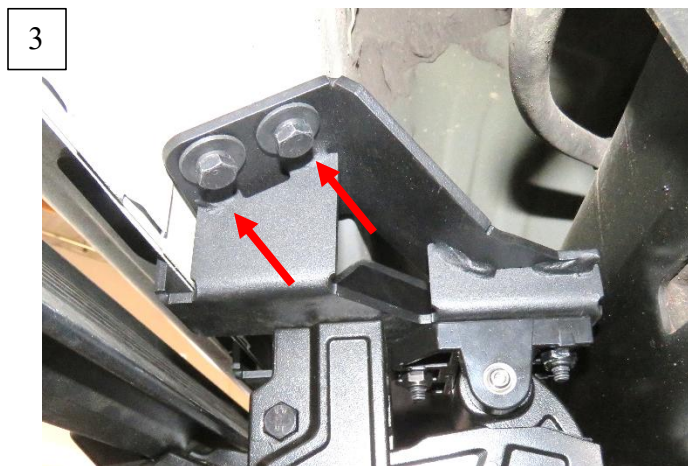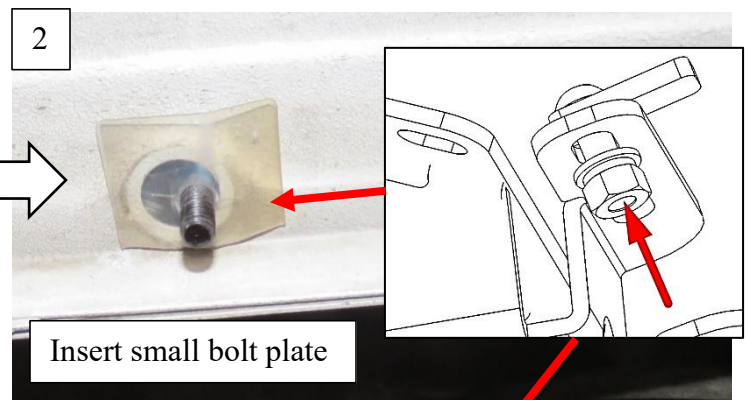


Repeat steps 7 – 11 for the Passenger Side.


Attach the main harness (J) to one LED Y-Harness (K). Then attach the LED Y-Harness (K) to the motor on the Driver Side. Repeat for Passenger Side.

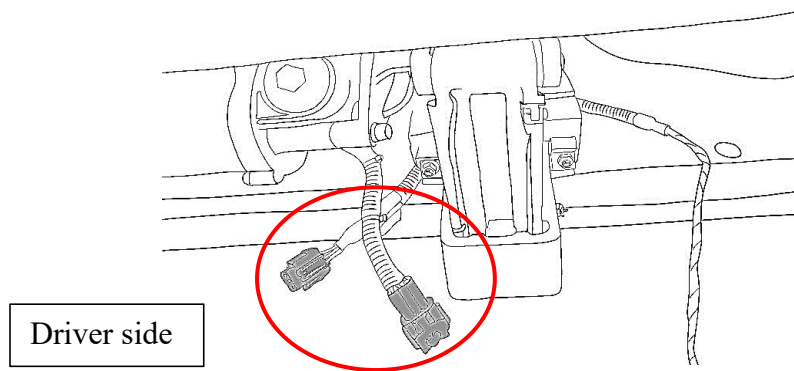

Plug in LED lights (N) into LED Y-Harness (K) and attach them to the bottom of the rocker panel. Use provided 3M double sided adhesive tape on back of LED light (N). Replace Fuse into Fuse Box.

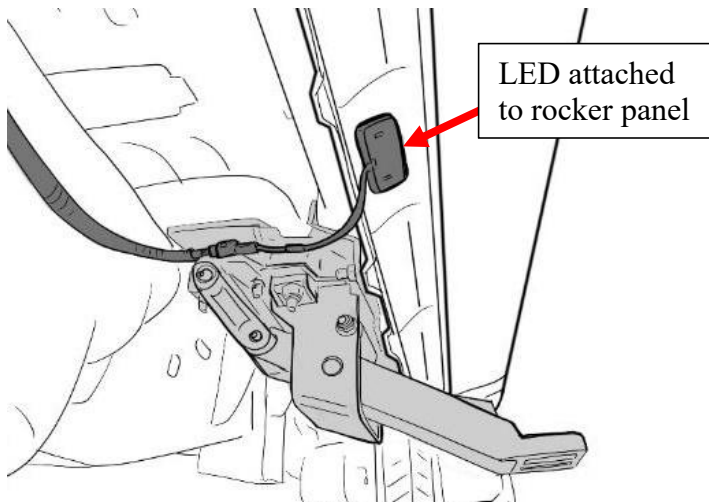


Close lid after replacing Fuse

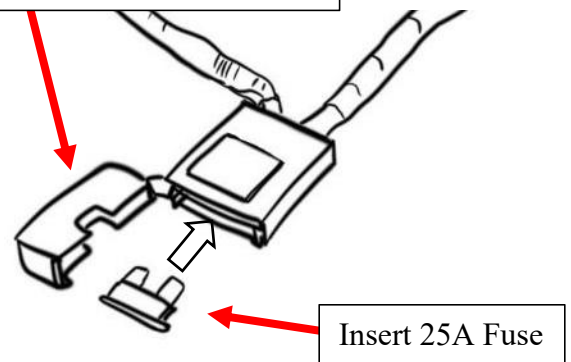

Check to make sure the harnesses on the Driver Side/Left Front Bracket Assembly (A) and Passenger Side Front Bracket Assembly (C) are connected to the main harness (J) via the LED-Y harnesses (K).


***NOTE:** The linkage arms on the front bracket assemblies will not move unless both motors are connected.

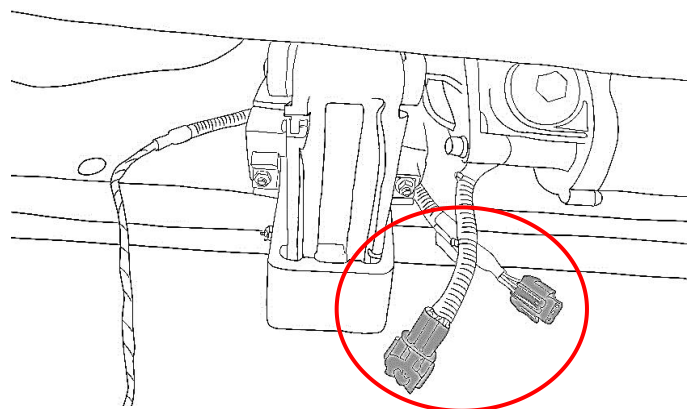


Seal the rubber boot with RTV Silicone Sealant if needed.

Hide wires and reattach the kick panel with the carpet fully unfurled in its original position. Reattach the door sill panels and check to make sure there are no obstructions or potential snag points around the brake pedal area.


Be sure to reattach plastic kick panel nut.

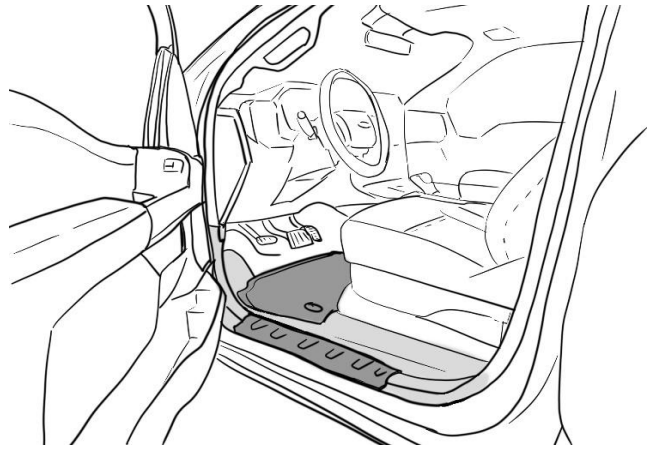

Prepare the power step boards. Locate the end of the boards and slide the M6 Carriage Bolts (E) into the channel on the underside of the board. Insert a total of 4 carriage bolts (E).

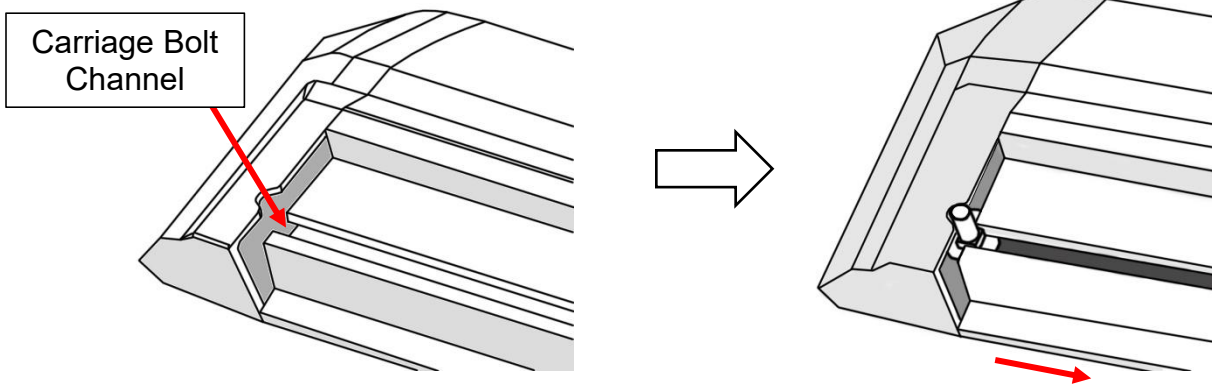


Use the notch in the board's end caps to feed the bolts into the channel.

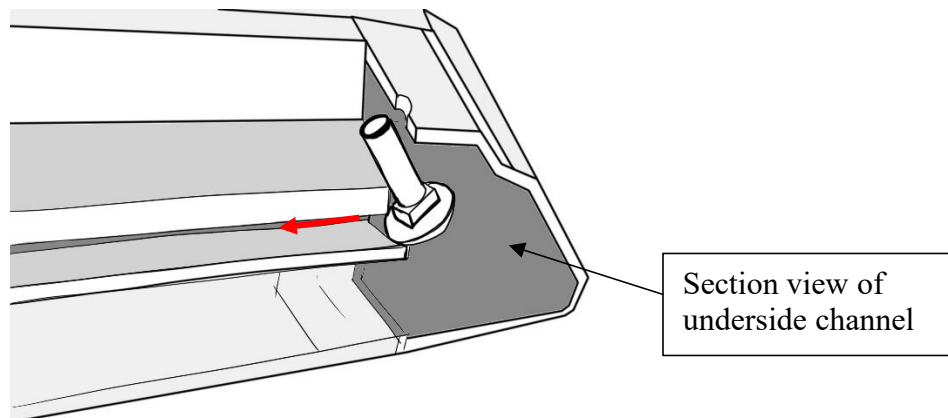

Perform a function check by closing the driver side front door and opening it again. The front bracket assembly (A) motor should activate the linkage arm and move it into the down or “deployed” position.

After deploying linkage arms, unplug main harness connector while front door is open to hold the board in the deployed position for running board installation.

Line up the carriage bolts (E), under the power step boards, with the slots on the linkage arms (A & B). Insert the 4 carriage bolts (E) into the slots on front and rear linkage arms. Adjust board to desired position. Moderately hand tighten the flange nuts (G) onto the carriage bolts.

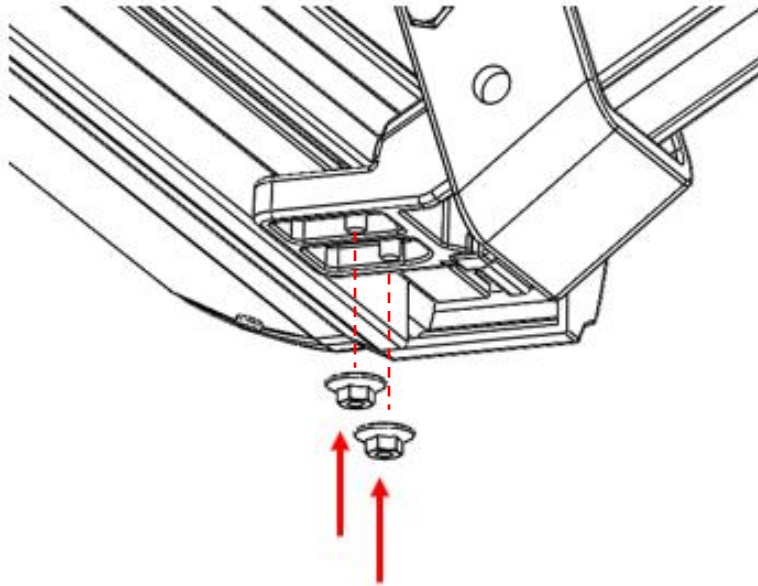

Once the board is adjusted, plug in main harness (J) connector to return power to the linkage arms. Open and close doors several times to deploy and retract the steps to settle the steps into their natural alignment. After cycling the step, tighten all hardware on the board and brackets.

Some further adjustment may be required for desired step position. Repeat for passenger side.

Perform system check and troubleshooting. If board is making irregular movements or noise, readjust the boards as follows:

- a) With board deployed loosen 6mm flange nuts under board.
- b) Leave the flange nuts slightly less than snug.
- c) Open and close door several times for board to settle into position.
- d) With the step in the deployed position, gradually tighten flange nuts while alternating between each. Do not over tighten.

If board is making abnormal noise or the motion is binding, repeat steps “a” through “d”.

Note: If the above method does not resolve the issue, the brackets mounting to the vehicle may not be aligned properly with the vehicle. In this case, remove the board and realign brackets before attempting steps “a” to “d” once again.

20

Reinstall any remaining trim panels if necessary. Check and make sure all hardware is fully tightened. Perform a final system check. Finish.



*NOTE: If board does not move during troubleshooting, check the tapped CAN Signal High and Low wires.

*NOTE: Use the adhesive foam provided in the kit to cushion components if they are touching things like brakes lines or other tubes, etc.