
PARTS LIST:

1	Driver/Left DS4 Running Board	1	Passenger/Right Rear Mounting Bracket
1	Passenger/Right DS4 Running Board	12	10mm x 35mm Hex Bolts
1	Driver/Left Front Mounting Bracket	24	10mm x 27mm OD x 3mm Flat Washers
1	Passenger/Right Front Mounting Bracket	12	10mm Nylon Lock Nuts
1	Driver/Left Center/Mounting Bracket	12	8mm x 30mm Hex Bolts
1	Passenger/Right Center Mounting Bracket	12	8mm Lock Washers
1	Driver/Left Rear Mounting Bracket	12	8mm x 24mm OD x 2mm Flat Washers

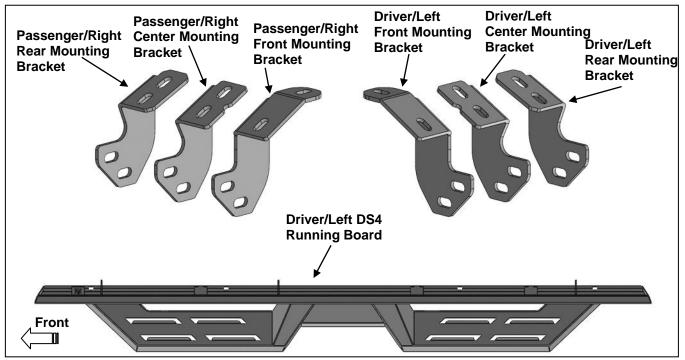


PROCEDURE:


- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. USE ILLUSTRATION TO IDENTIFY BRACKETS AND RUNNING BOARDS.
- 2. Starting on the Driver/Left front of the vehicle, remove the plastic plugs or hex bolts covering the (2) threaded holes in the floor panel, (Figure 1).
- 3. Select Driver/Left Front Mounting Bracket, (Figure 2). Attach the Bracket to the panel with (2) 8mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers, (Figure 2). Do not tighten hardware.
- **4.** Next, move to the second mounting location, **(Figure 3)**. Select (1) Center Mounting Bracket. Repeat **Step 3** to attach the Bracket to the floor panel, **(Figure 4)**.
- 5. Continue to the rear mounting location, (Figure 5). Repeat Step 3 to attach (1) Rear Mounting Bracket to the floor panel.
- 6. Select the Driver/Left DS4 Running Board. Attach the Running Board to the rear faces of the Mounting Brackets with (6) 10mm Hex Bolts, (12) 10mm Flat Washers and (6) 10mm Nylon Lock Nuts, (Figure 6). Do not tighten hardware.
- 7. Level and adjust the DS4 Running Board and tighten all hardware.
- 8. Repeat **Steps 2—7** to attach the Passenger/Right DS4 Running Board.
- **9.** Do periodic inspections to the installation to make sure that all hardware is secure and tight.


To protect your investment, Do not use any type of polish or wax that may contain abrasives that could damage the finish. Mild soap may be used to clean the Running Boards.

Page 1 of 3 7/16/21 (AL)

Driver/Left Side Installation Pictured

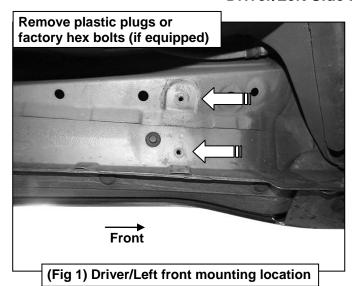


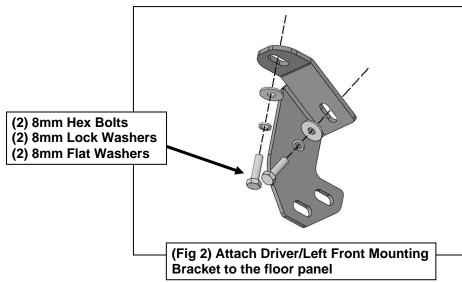


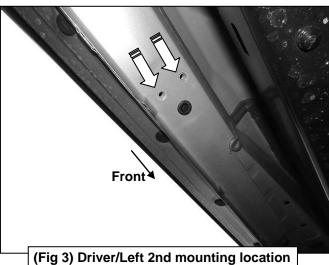


Page 2 of 3 7/16/21 (AL)

Driver/Left Side Installation Pictured

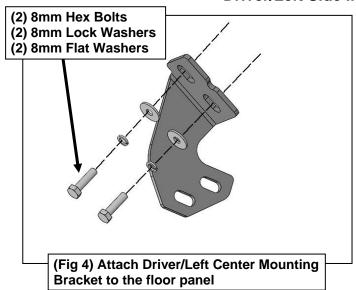

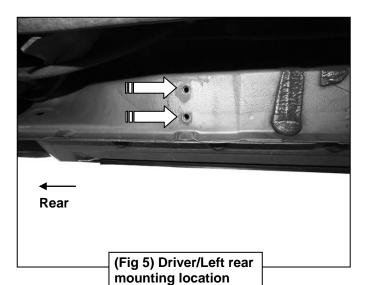

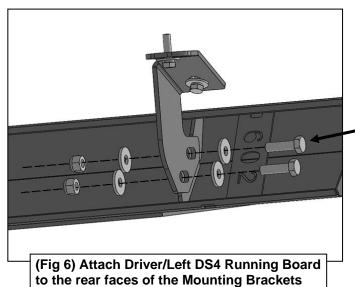

(2) 10mm Hex Bolts(4) 10mm Flat Washers(2) 10mm Nylon Lock Nuts

Page 3 of 3 7/16/21 (AL)