INSTALLATION INSTRUCTIONS

PARTS LIST:

| Qty	Item Description	Qty	Item Description
1	Driver/Left Side Running Board	2	Passenger/Right Side Rear Mounting Brackets
1	Passenger/Right Side Running Board	12	8-1.25mm x 25mm Combo Bolts
1	Driver/Left Side Front Mounting Bracket	12	8-1.25mm x 30mm Hex Bolts
1	Passenger/Right Side Front Mounting Bracket	12	8mm x 24mm x 2mm Flat Washers
2	Driver/Left Side Rear Mounting Brackets	12	8mm Lock Washers

Driver/Left Running Board

Front →
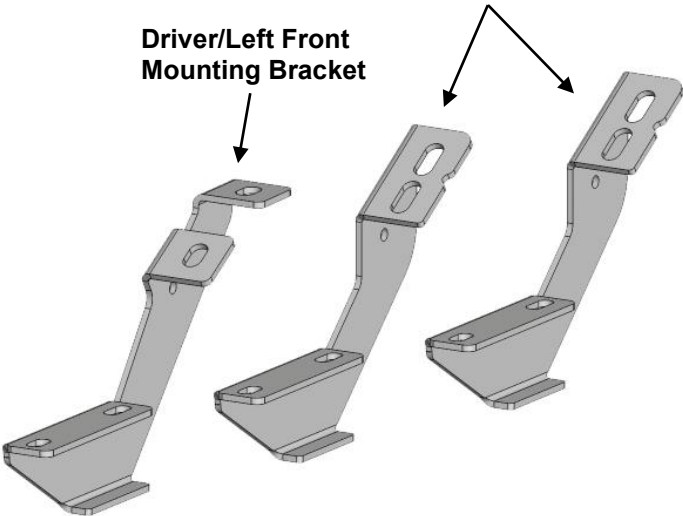
Passenger/Right Running Board

**Passenger/Right Center &
Rear Mounting Brackets**

**Passenger/Right Front
Mounting Bracket**

**Driver/Left Front
Mounting Bracket**
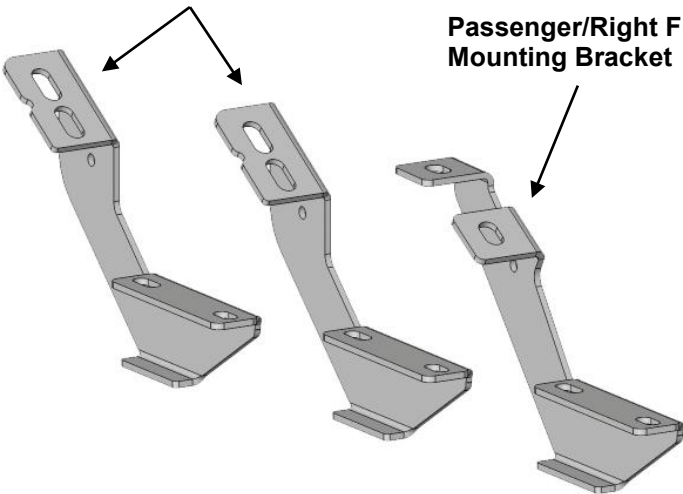
**Driver/Left Center &
Rear Mounting Brackets**

Combo Bolt

Hex Bolt

Lock
Washer

Flat
Washer

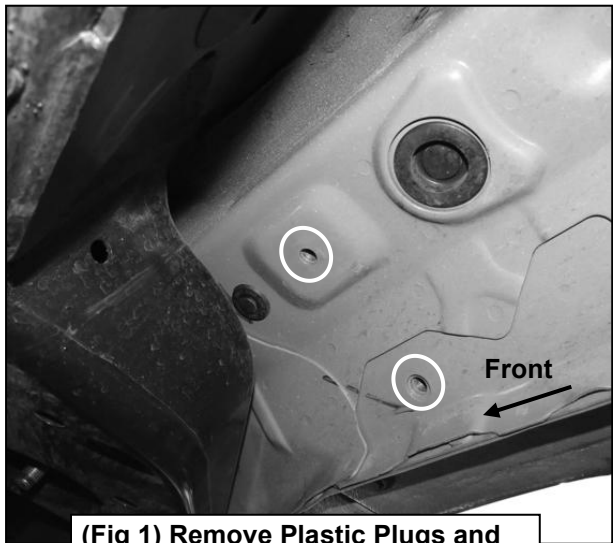| TOOLS REQUIRED			
Rachet	**13mm Socket**	**Extensions**	**Wrench**

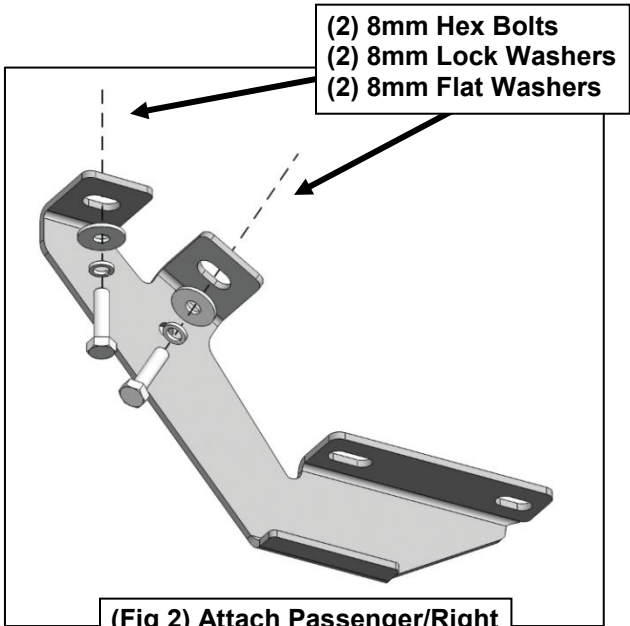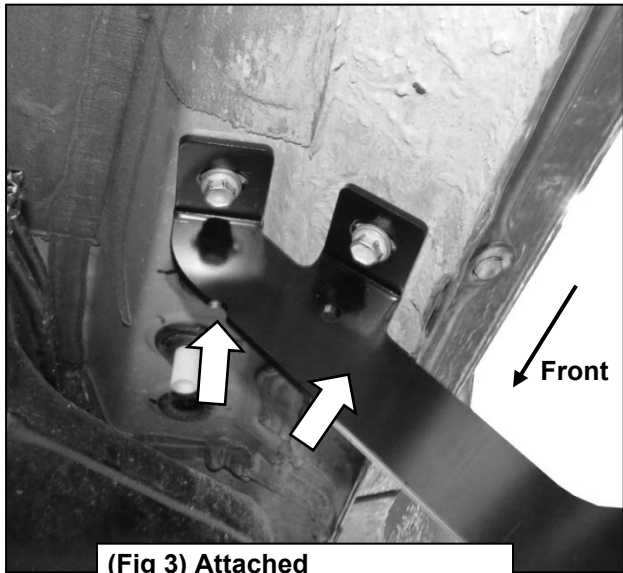**1** Follow (Fig 1 – 9) to attach Brackets to the Passenger/Right Side. Repeat the following steps on the Driver/Left Side. Ensure all hardware is hand tight at this point.

Front

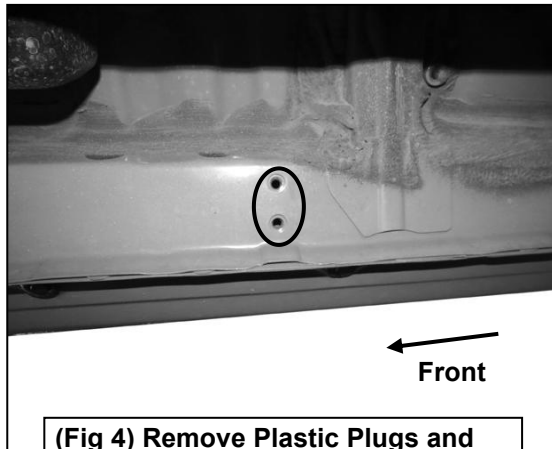**(Fig 1) Remove Plastic Plugs and attach brackets at Passenger/Right Front mounting location**

(2) 8mm Hex Bolts
(2) 8mm Lock Washers
(2) 8mm Flat Washers

(Fig 2) Attach Passenger/Right Front Mounting Bracket

Front

(Fig 3) Attached Passenger/Right Front Bracket

(Fig 4) Remove Plastic Plugs and attach Passenger/right center bracket at center mounting location

Front
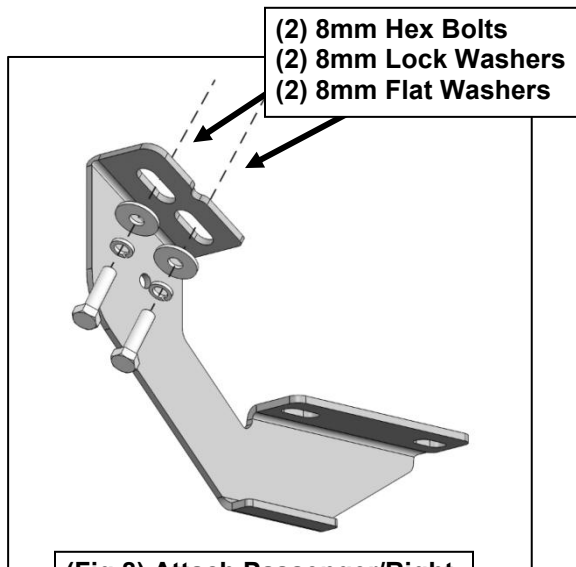
**(2) 8mm Hex Bolts
(2) 8mm Lock Washers
(2) 8mm Flat Washers**

(Fig 5) Attach Passenger/Right Center Bracket

Front
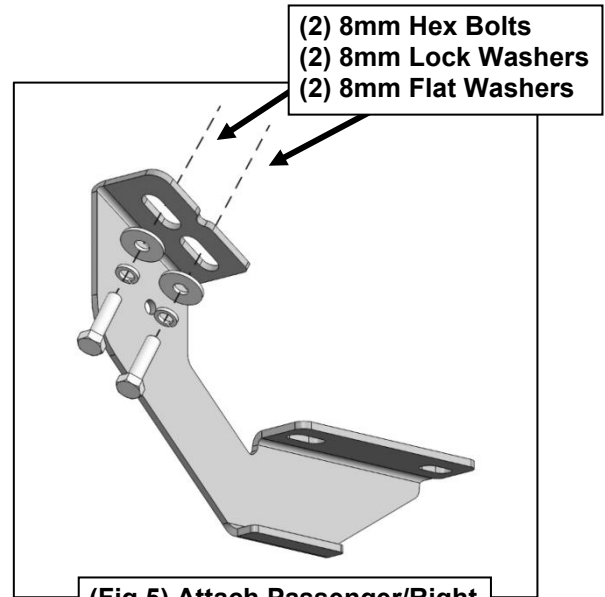
(Fig 6) Attached Passenger/Right Center Bracket

Front
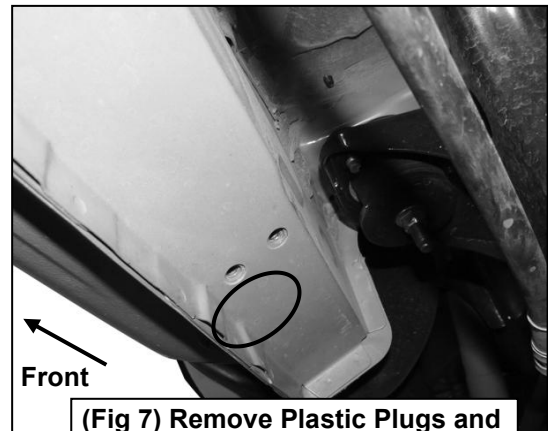
(Fig 7) Remove Plastic Plugs and attach Passenger/Right Rear bracket at rear mounting location

**(2) 8mm Hex Bolts
(2) 8mm Lock Washers
(2) 8mm Flat Washers**

(Fig 8) Attach Passenger/Right Rear Bracket

Front

(Fig 9) Attached Passenger/Right Rear Bracket

2

Follow (Fig 10-11) to install the Passenger/Right running board. Repeat the following steps on the Driver/Right Side. Ensure all hardware is hand tight at this point.

(2) 8mm Combo

(Fig 10) Attach Running Board to Brackets

Front

(Fig 11) Attached Passenger/Right Running Board
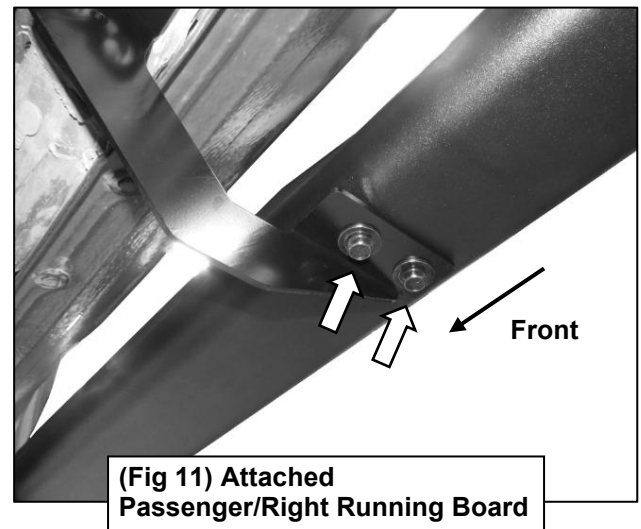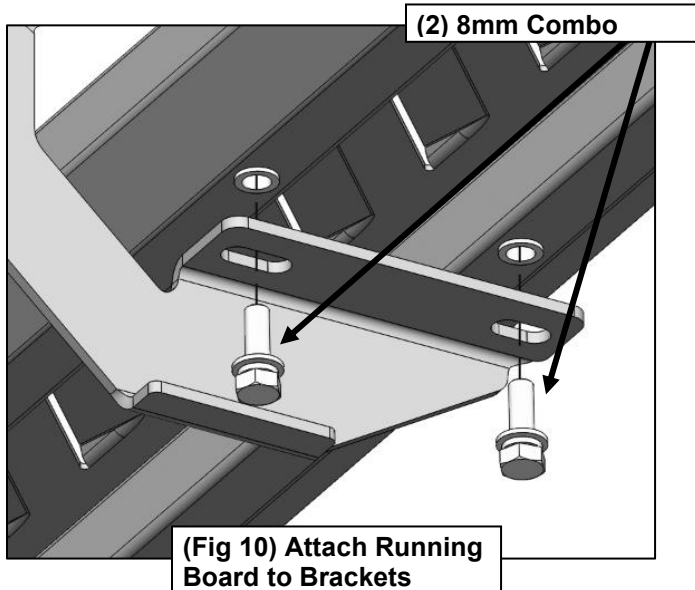
3

Ensure Running Board is level, then tighten all hardware. Installation is complete. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

Complete Installation